


Warning: It is a requirement to check  
airstrip condition and details with owner

# The Vale, TAS

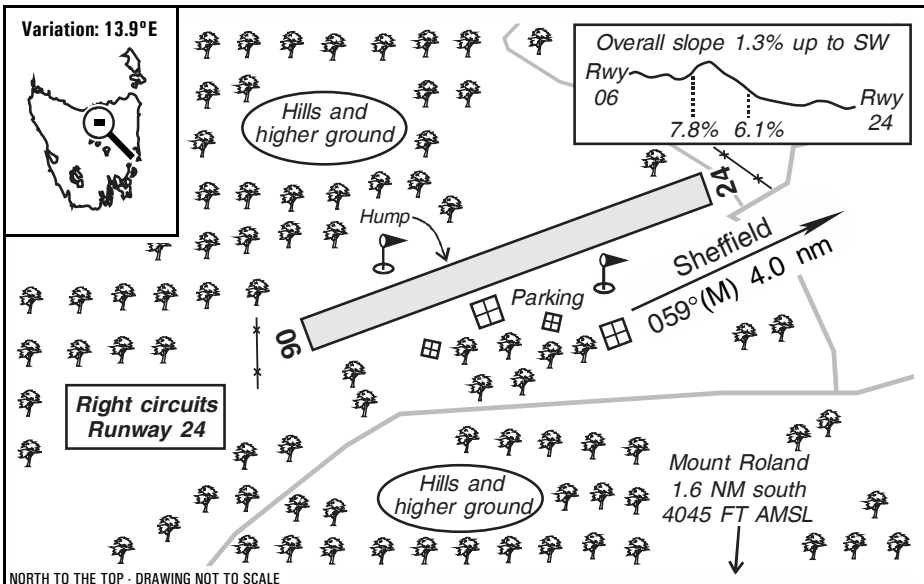

<b>Elevation:</b>	723 Feet AMSL	<b>Time Zone:</b>	UTC + 10
<b>GPS Position:</b>	41° 25.797' South 146° 15.825' East	<b>Area Briefing:</b>	70
<b>WAC Chart:</b>	Tasmania (3556)	<b>ALA Code:</b>	YVAL
<b>Owner/Operator:</b>	The Vale Tasmania Pty Ltd (03) 62876995, <a href="mailto:airfield@thevale.com.au">airfield@thevale.com.au</a>		
<b>Strip Directions:</b>	06-24		
<b>Strip Lengths:</b>	1300 M		
<b>Strip Surface:</b>	Unsealed - grass,		
<b>Windsock:</b>	Yes - two white windsocks		
<b>Strip Markers:</b>	White gable markers		
<b>Lighting:</b>	Nil		
<b>Fuel:</b>	Nil		
<b>Procedures And Remarks:</b>	CTAF 126.7. Melbourne Centre 120.7 (in the circuit), 122.6 (3000 feet). HF 3461/6565/8822. Operations at this immaculate private field require prior permission and are undertaken at the responsibility and risk of the pilot in command. Primary contact point is Phillip de Bomford 0409 669433 (mobile). Contact before landing for permission and to confirm runway serviceability. Preferred operating direction runway 24. Right hand circuits runway 24. Beware of surrounding high terrain, fences and trees on approach. Potential wind shear, particularly during strong southerlies. Bird and animal hazard exists. For further details including weather station and airfield webcam: <a href="https://thevale.com.au/the-vale-airfield/">https://thevale.com.au/the-vale-airfield/</a> . Cross check details with ERSA.		